

# PANASONIC DVD RECORDER UPGRADE REMOTE USER INSTRUCTIONS

**Please follow these instructions 100%**

1. Simply have the unit switched on **with NO DISC inside**. ( Units with a Hard Disk Drive should be in DVD MODE )
2. Put batteries into the upgrade remote, the LED will light to indicate the remote is ready.
3. Aim the upgrade remote at your DVD recorder and press and hold the button.



The LED on the upgrade remote will flash four times whilst the remote is sending data and will then go out. After the LED has been out for around 5 seconds you should release the button.

4. Wait around 5 minutes and then using your original remote switch your DVD recorder into Standby then unplug it from the mains for 5 seconds. That's it ! Plug it back in and it will be Multi region.