

# PANASONIC DVD RECORDER UPGRADE REMOTE USER INSTRUCTIONS

**Please follow these instructions 100%**

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Simply have the unit switched on with NO DISC inside. ( Units with a Hard Disk Drive should be in DVD MODE )
2. Put batteries into the upgrade remote, the LED will light to indicate the remote is ready.
3. Aim the upgrade remote at your DVD recorder and press and hold the button.




The LED on the upgrade remote will flash four times whilst the remote is sending data and will then go out. After the LED has been out for around 5 seconds you should release the button.

4. Wait around 5 minutes and then using your original remote switch your DVD recorder into Standby then unplug it from the mains for 5 seconds. That's it ! Plug it back in and it will be Multi region.

**If the upgrade does not seem to have worked please visit the following link.**

**[www.dvdchips.co.uk/aftersaleshelp](http://www.dvdchips.co.uk/aftersaleshelp)**

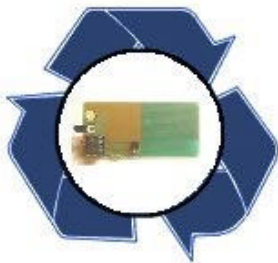

**VOLUNTARY REMOTE RECYCLING SCHEME**

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

**UK RETURNS – NO POSTAGE REQUIRED**

**NON UK RETURNS – POSTAGE REQUIRED**

**Freepost RLSR-CKXT-TYJY**

**DVD Chips UK**

**PO Box 647**

**Halifax**

**HX1 4ZD**

**DVD Chips UK (Dept RR)**

**20 Spring Hall Place**

**Halifax**

**HX1 4TF**

**United Kingdom**