

SONY BLU-RAY REMOTE USER INSTRUCTIONS

Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Simply have the unit switched on with NO DISC inside.
2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready.
3. Aim the upgrade remote at your unit and press and hold the button.



The LED on the upgrade remote will flash five times whilst the remote is sending data and will then go out (The 24P light on your unit will now flash)

When the LED on the remote has been out for around 5 seconds you should release the button.

4. Wait around 10 seconds before switching your Blu-Ray player into Standby and unplugging it from the mains for around 5 seconds. That's it ! Plug the player back in and it will be Multi region for DVD playback.

If the upgrade does not seem to have worked please visit the following link.

www.dvdchips.co.uk/aftersaleshelp



VOLUNTARY REMOTE RECYCLING SCHEME

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

UK RETURNS – NO POSTAGE REQUIRED

NON UK RETURNS – POSTAGE REQUIRED

Freepost RLSR-CKXT-TYJY

DVD Chips UK

PO Box 647

Halifax

HX1 4ZD

DVD Chips UK (Dept RR)

20 Spring Hall Place

Halifax

HX1 4TF

United Kingdom