

## SONY DAV-ISxx INSTRUCTIONS

### Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Get your player ready to accept the code ... you should first have the player switched on **WITH NO DISC INSIDE**

Now press and hold both the "Stop" and "Eject" keys on the main unit until moving bars are seen, release these buttons and wait for the unit to show LOCKED

2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready. Aim the upgrade remote at your DVD player and press and hold the button.



The LED on the Upgrade remote will flash 5 times before going out and moving bars will be shown on the unit again.

3. Wait around 1 minute then unplug the player from the mains for around 5 seconds.
4. Plug the unit back in and switch it back on, wait a few seconds before pressing and holding "Stop" and "Eject" again until you see the moving bars again, release the buttons and the unit should say UNLOCKED. This completes the process, your unit is now multi-region.

**If the upgrade does not seem to have worked please visit the following link.**

**[www.dvdchips.co.uk/aftersaleshelp](http://www.dvdchips.co.uk/aftersaleshelp)**



**VOLUNTARY REMOTE RECYCLING SCHEME**

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

**UK RETURNS – NO POSTAGE REQUIRED**

**NON UK RETURNS – POSTAGE REQUIRED**

**Freepost RLSR-CKXT-TYJY**

**DVD Chips UK**

**PO Box 647**

**Halifax**

**HX1 4ZD**

**DVD Chips UK (Dept RR)**

**20 Spring Hall Place**

**Halifax**

**HX1 4TF**

**United Kingdom**