

## SONY DVD RECORDER INSTRUCTIONS

### Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Get your DVD Recorder ready to accept the code ... simply have it plugged in but in standby with no disc inside.
2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready. Aim the upgrade remote at your DVD recorder and press and hold the button.




The LED on the Upgrade remote will flash 5 times before going out, you can now release the button. You may hear a "beep" from the recorder or you may see "Timer OK" on the display or it may switch on in which case you should switch it back into standby using the original remote.

3. Unplug the recorder from the mains for 5 seconds. That's it ! Plug it back in and it will be Multi region.

**If the upgrade does not seem to have worked please visit  
the following link.**

**[www.dvdchips.co.uk/aftersaleshelp](http://www.dvdchips.co.uk/aftersaleshelp)**

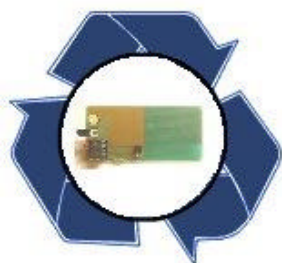

**VOLUNTARY REMOTE RECYCLING SCHEME**

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

**UK RETURNS – NO POSTAGE REQUIRED**

**NON UK RETURNS – POSTAGE REQUIRED**

**Freepost RLSR-CKXT-TYJY**

**DVD Chips UK**

**PO Box 647**

**Halifax**

**HX1 4ZD**

**DVD Chips UK (Dept RR)**

**20 Spring Hall Place**

**Halifax**

**HX1 4TF**

**United Kingdom**