

SONY DVP-NS9100 UPGRADE INSTRUCTIONS

Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Get your player ready to accept the code ... you should have the player in standby mode **WITH NO DISC INSIDE** . Now press and hold the "Dimmer" , "Open/Close" and "Stop" keys on the front panel until the display shows "Diag Setup" .The TV should now display the Service Menu and you are ready to do the upgrade.
2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready. Aim the upgrade remote at your DVD player and press and hold the button.




The LED on the Upgrade remote will flash 5 times before going out. Wait 2 or 3 seconds after the last flash then release the button on the upgrade remote before switching the unit into standby if this has not already happened automatically.

3. Unplug the player from the mains for 5 seconds. That's it ! Plug the player back in and it will be Multi region.

If the upgrade does not seem to have worked please visit the following link.

www.dvdchips.co.uk/aftersaleshelp

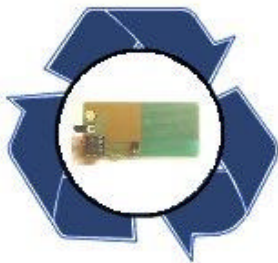

VOLUNTARY REMOTE RECYCLING SCHEME

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

UK RETURNS – NO POSTAGE REQUIRED

NON UK RETURNS – POSTAGE REQUIRED

Freepost RLSR-CKXT-TYJY

DVD Chips UK

PO Box 647

Halifax

HX1 4ZD

DVD Chips UK (Dept RR)

20 Spring Hall Place

Halifax

HX1 4TF

United Kingdom