

SONY DVD RECORDER INSTRUCTIONS

Please follow these instructions 100%

Please use the remote at a distance of approx 1 to 2 meters from the player and avoid using it in bright sunlight.

1. Simply have the unit switched on with NO DISC inside. (Units with a Hard Disk Drive should be in DVD MODE)
2. Put the batteries into the upgrade remote, the LED will light to indicate the remote is ready. Aim the upgrade remote at your DVD recorder and press and hold the button.



The LED on the Upgrade remote will flash 5 times before going out, you can now release the button. You may see "Timer OK" on the display of the DVD recorder.

3. Switch off then unplug the recorder from the mains for 5 seconds.
4. That's it ! Plug it back in and it will be Multi region.

If the upgrade does not seem to have worked please visit the following link.

www.dvdchips.co.uk/aftersaleshelp



VOLUNTARY REMOTE RECYCLING SCHEME

Please help us to achieve our recycling target by returning used remotes after use. Please re-use the same bag that the remote arrived in, simply re-seal with sticky tape and attach the correct address label below.

Thank you for taking part in this voluntary recycling scheme.

UK RETURNS – NO POSTAGE REQUIRED

NON UK RETURNS – POSTAGE REQUIRED

Freepost RLSR-CKXT-TYJY

DVD Chips UK

PO Box 647

Halifax

HX1 4ZD

DVD Chips UK (Dept RR)

20 Spring Hall Place

Halifax

HX1 4TF

United Kingdom